

### Seats

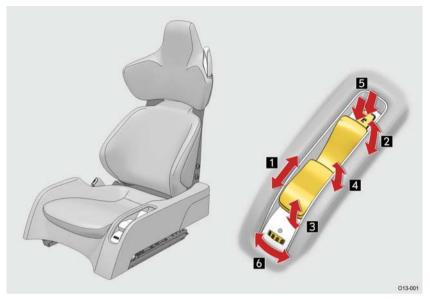

- Seat position switch
- 2 Seatback angle switch
- **B** Seat cushion (front) angle switch
- 4 Vertical height adjustment switch
- **5** Seatback fold and return switch  $(\rightarrow P. 33)$
- Seat heater temperature adjustment dial
  When the dial is rotated, the indicator light comes on.
  The higher the number is, the warmer the seat becomes.

#### Seatback fold and return

To enable easier loading and unloading of luggage, the seats can be moved using the seatback fold and return switch. A buzzer will sound once the seat starts moving.

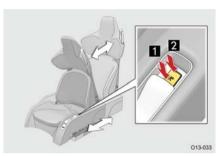

### 1 Fold


Press the switch to fold the seatback down and move the seat forward.

#### **2** Return

Press the switch to return the seat to its former position.

### Power easy access system\*

When the driver enters and exits the vehicle, the driver's seat will automatically perform the following operations:

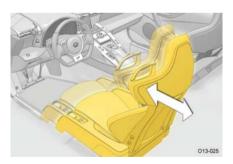

Exiting the vehicle: When the key is removed from the ignition switch, the driver's seat will move backward (auto away function).

Entering the vehicle: When the key is inserted into the ignition switch, the driver's seat will move forward (auto return function).

<sup>\*:</sup> This setting must be customized at your Lexus dealer.

#### n The seat heaters can be used when

The ignition switch is in the "ON" position.

#### n When the seat heater is not in use

Set the dial at "O". The indicator light goes off.

#### n Seatback fold and return switch

When the doors are closed, the seatback fold and return switch cannot be used to fold the seatbacks. However, the passenger seat can be returned using the seatback fold and return switch even when the door is closed.

#### n When using the seatback fold and return switch

In order to enable easier loading and unloading of luggage, the seat belt can be released from its seat belt guide. After pulling the upper part of the seat belt guide away from its magnet, release the seat belt.

#### n Stopping the seat folding operation partway

Operate a seat adjustment switch.

### n The auto away function for exiting the driver seat

If the seat is already close to the rearmost position, the auto away function may not operate when the driver exits the vehicle.

#### n Customization

The power easy access system can be activated/deactivated. (Customizable features  $\rightarrow$  P. 383)

### **A** CAUTION

### n Seat adjustment

Do not recline the seat more than necessary when the vehicle is in motion to reduce the risk of sliding under the lap belt.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

#### n Seatback fold and return switch

Never operate the seat fold switch while the seat is occupied, as the occupant may become jammed in the seat, resulting in serious injury.

# **A** CAUTION

#### n If the seat belt guide is disengaged

- 1 Make sure that the seat belt guide is securely fixed before driving.
- 1 After using the seatback fold and return switch, make sure that the seat belt passes through the seat belt guide.

#### n Avoiding burns when using the seat heaters

- 1 Use caution when seating the following persons in a seat with the seat heater on to avoid the possibility of burns:
  - · Babies, small children, the elderly, the sick and the physically challenged
  - Persons with sensitive skin
  - Persons who are fatigued
  - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- 1 Do not cover the seat with anything when using the seat heater. Using the seat heater with a blanket or cushion increases the temperature of the seat and may lead to overheating.
- 1 Do not use the seat heater more than necessary. Doing so may cause minor burns or overheating.

# **⚠** NOTICE

### ${ m n}\,$ To prevent seat heater damage

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

### n To prevent battery discharge

Turn the seat heaters off when the engine is not running.

### Seat belts


Make sure that all occupants are wearing their seat belts before driving the vehicle.

#### n Correct use of the seat belts



- 1 Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- 1 Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- 1 Do not twist the seat belt.

### n Fastening and releasing the seat belt

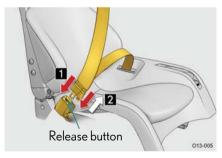

- Fastening the belt
  - Push the tab into the buckle until a clicking sound is heard.
- Releasing the belt

Press the release button.


### Seat belt guide



When fastening the seat belt, always ensure that it passes through the seat belt guide.

The seat belt can be released from its seat belt guide as necessary.  $(\rightarrow P. 34)$ 

### Seat belt pretensioners

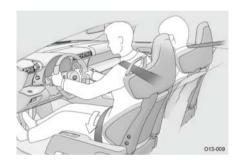

The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal collision.

The pretensioner may not activate in the event of a minor frontal impact, a side impact or a rear impact.


### n Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward or pull out the belt too quickly. Allow the belt to fully retract, and then slowly extend the belt. If the belt cannot be pulled out of the retractor, firmly pull the belt and release it. You will then be able to smoothly pull the belt out of the retractor.

#### n Automatic locking retractor (ALR)

When a passenger's lap belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more.  $(\rightarrow P. 80)$ 

#### n Pregnant women

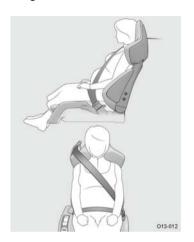

Obtain medical advice and wear the seat belt in the proper way.  $(\rightarrow P. 36)$ 

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

### n People suffering illness

Obtain medical advice and wear the seat belt in the proper way.

### n Child seat belt usage

The seat belts of your vehicle are principally designed for persons of adult size.

- 1 Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.  $(\rightarrow P. 76)$
- 1 When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 36 regarding seat belt usage.

### ${ m n}\,$ Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

### n Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact your Lexus dealer for seat belt replacement or installation.

# **A** CAUTION

#### n Wearing a seat belt

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failing to do so may cause death or severe injury.

- 1 Ensure that all passengers wear a seat belt.
- 1 Always wear a seat belt properly.
- 1 Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- 1 Do not recline the seat any more than necessary to achieve a proper seating position. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- 1 Do not wear the shoulder belt under your arm.
- 1 Always wear your seat belt low and snug across your hips.

#### n Seat belt pretensioners

- 1 Do not place anything, such as a cushion, on the passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the seat belt pretensioner for the passenger's seat may not activate in the event of a collision.
- 1 If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your Lexus dealer.

### **CAUTION**

#### n Child restraint lock function belt precaution

Do not allow children to play with the child restraint lock function belt. If the belt becomes twisted around a child's neck, it will not be possible to pull the belt out leading to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt behind the seat belt guide.

#### n Seat belt damage and wear

- 1 Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
  - If the seat belt is damaged, the built-in SRS seat belt airbag may not inflate in an accident.
- 1 Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- 1 Ensure that the belt and tab are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact your Lexus dealer.
- 1 If your vehicle has been involved in an accident, have the seat assembly including the belts inspected at your Lexus dealer even if there is no obvious damage.
- 1 Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling of the pretensioner may prevent it from operating properly resulting in death or serious injury.

### n When using the seat belt guide


- 1 Always make sure that the belt is not twisted, and runs freely through the guide.
- 1 Always make sure the seat belt passes through the seat belt guide. If the seat belt is not passing through the seat belt guide correctly and the SRS airbags are inflated, the SRS seat belt airbag may not inflate correctly, resulting in death or serious injury.

# Steering wheel

The steering wheel can be adjusted to a comfortable position.



Hold the steering wheel and push the lever down.

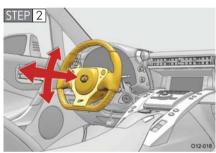

Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

### **A** CAUTION

### $n \ \, \hbox{\it Caution while driving}$

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

### n After adjusting the steering wheel

Make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury.

# Anti-glare inside rear view mirror

Glare from the headlights of vehicles behind can be reduced by operating the tab:



- Normal position
- Anti-glare position




#### n Caution while driving

Do not adjust the position of the mirror while driving.

Doing so may lead to mishandling of the vehicle and an accident, resulting in death or serious injury.


### **Outside rear view mirrors**

Mirror angle can be adjusted using the switch.

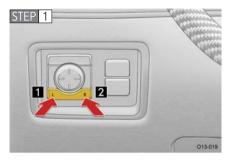

To select a mirror to adjust, press the switch.

- 1 Left
- Right

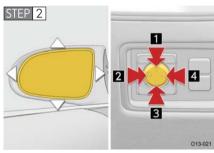

To adjust the mirror, press the switch.

- 1 Up
- 2 Left
- 3 Down
- 4 Right

# Folding the mirrors



Push the mirror back in the direction of the vehicle's rear.

#### n The mirrors can be adjusted when

The ignition switch is in the "ACC" or "ON" position.

#### n Rain clearing mirrors

When water droplets collects on the mirror surface, for example when it rains, the rain clearing (hydrophilic) effect of the mirrors causes the droplets to be spread out into a film making the rear view clearer. In the following cases, the rain clearing effect will be reduced temporarily, but will return after 1 or 2 days' exposure to direct sunlight.

- 1 After wiping dirt off the mirrors
- 1 When the mirrors fog up
- 1 After your vehicle has been parked for a long period in underground parking lots etc. where there is no direct sunlight

#### n When the mirrors are fogged up

Turn on the mirror defoggers to defog the mirrors.  $(\rightarrow P. 201)$ 

# **A** CAUTION

### n When driving the vehicle

Observe the following precautions while driving.

Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- 1 Do not adjust the mirrors while driving.
- 1 Do not drive with the mirrors folded back.
- 1 Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

### n When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

### ${ m n}\,$ When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

# **M** NOTICE

#### ${\rm n}\,$ If the mirrors become iced up

In order to retain the rain-clearing properties of the mirror, do not attempt to scrape the ice off. Instead, remove it by turning on the mirror defoggers or by applying warm water.